

MODEL CASE

MODEL CASE

Oyster, 40 mm, steel

DIAMETER

40 mm

MATERIAL

904L steel

BEZEL

Unidirectional rotatable 60-minute graduated, scratch-resistant Cerachrom insert in ceramic, numerals and graduation enameled

WINDING CROWN

Screw-down, Twinlock double waterproofness system

CRYSTAL

Scratch-resistant sapphire, Cyclops lens over the date

WATER-RESISTANCE

Waterproof to 300 metres

MOVEMENT

MOVEMENT

Perpetual, mechanical, self-winding

CALIBRE

3130, no date, Manufacture Rolex
3135, date, Manufacture Rolex

FUNCTIONS

Centre hour, minute and seconds hands. Instantaneous date with rapid-setting. Stop seconds for precise time setting

OSCILLATOR

Paramagnetic blue Parachrom hairspring.

WINDING

Bidirectional self-winding via Perpetual rotor

POWER RESERVE

Approximately 48 hours

BRACELET

BRACELET

Oyster, flat three-piece links

BRACELET MATERIAL


904L steel

CLASP

Folding Oysterlock safety clasp with Glidelock extension system

OVERVIEW

- 1 Hour hand
- 2 Minute hand
- 3 Seconds hand
- 4 Date window (Submariner date only)
- 5 Unidirectional rotatable graduated bezel with Cerachrom insert in ceramic
- 6 Triplock winding crown with triple waterproofness system

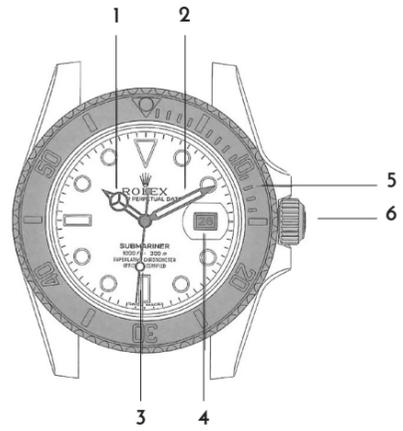

SETTING THE OYSTER PERPETUAL SUBMARINER

Screwed-down position (position 0):

the crown is completely screwed down against the case.


When the crown and pushers are in this position, the Oyster Perpetual Submariner is guaranteed waterproof to a depth of 300 metres

Manual winding (position 1):

the crown is unscrewed. To wind the watch manually, turn the crown clockwise; turning in the other direction has no effect. When setting the watch for the first time or after the watch has stopped, complete a minimum of 20 turns for partial winding

Setting the time (position 2):

the crown is unscrewed and pulled out to the first notch. The seconds hand is stopped, allowing you to set the time to the precise second. To set the hour and minute, turn the crown in either direction.

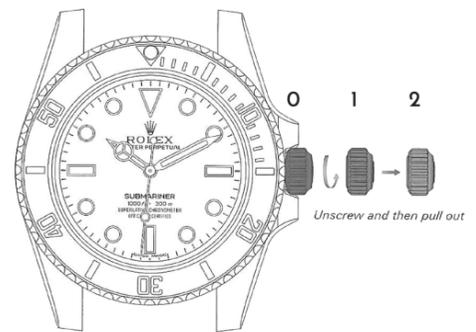

To screw the crown back down against the case, return it to position 1 and apply light pressure on it while screwing it down clockwise against the case.

After every use, carefully screw the crown back down against the case to guarantee the waterproofness. The crown should never be unscrewed under water

SETTING THE OYSTER PERPETUAL SUBMARINER DATE

Screwed-down position (position 0):

the crown is completely screwed down against the case.

When the crown and pushers are in this position, the Oyster Perpetual Explorer II is guaranteed waterproof to a depth of 300 metres

Manual winding (position 1):


the crown is unscrewed. To wind the watch manually, turn the crown clockwise; turning in the other direction has no effect. When setting the watch for the first time or after the watch has stopped, complete a minimum of 20 turns for partial winding

Setting the date (position 2):

the crown is unscrewed and pulled out to the first notch. To set the date, turn the crown clockwise; turning in the other direction has no effect. During this operation, the watch continues to function.

Setting the time (position 3):

the crown is unscrewed and pulled out to the first notch. The seconds hand is stopped, allowing you to set the time to the precise second. To set the hour and minute, turn the crown in either direction. To avoid confusion between a.m. and p.m. hours, move the hour hand to 12 o'clock. If the date changes, it is midnight.

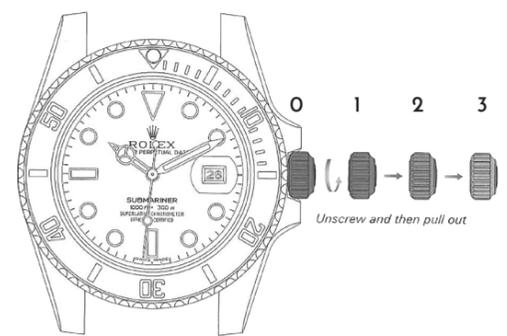

To screw the crown back down against the case, return it to position 1 and apply light pressure on it while screwing it down clockwise against the case.

After every use, carefully screw the crown back down against the case to guarantee the waterproofness. The crown should never be unscrewed under water


OYSTERLOCK CLASP WITH ROLEX GLIDELock FINE-ADJUSTMENT SYSTEM

The Rolex Glidelock fine-adjustment system enables you to adjust the bracelet length in 2 mm increments up to a total of approximately 20 mm, which allows you to wear the watch over a diving suit.

1 Open the safety catch



2 Open the clasp

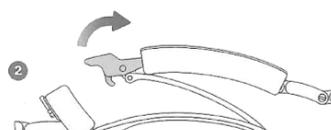

3 Pull on the bracelet to release it from the notch in the rack

4 Adjust the position of the bracelet to the desired length

5 Lock down the bracelet

