

MODEL CASE

MODEL CASE

Oyster, 42 mm, steel

DIAMETER

42 mm

MATERIAL

904L steel

BEZEL

Fixed, 24-hour graduated

WINDING CROWN

Screw-down, Twinlock double waterproofness system

CRYSTAL

Scratch-resistant sapphire, Cyclops lens over the date

WATER-RESISTANCE

Waterproof to 50 metres

MOVEMENT

MOVEMENT

Perpetual, mechanical, self-winding, 24-hour hand

CALIBRE

3187, Manufacture Rolex

FUNCTIONS

Centre hour, minute and seconds hands. 24-hour display. Second time zone with independent rapid-setting of the hour hand. Instantaneous date. Stop seconds for precise time setting

OSCILLATOR

Paramagnetic blue Parachrom hairspring. High-performance Paraflex shock absorbers

WINDING

Bidirectional self-winding via Perpetual rotor

POWER RESERVE

Approximately 48 hours

BRACELET

BRACELET

Oyster, flat three-piece links

BRACELET MATERIAL


904L steel

CLASP

Folding Oysterlock safety clasp with Easylink 5 mm confort extension link

OVERVIEW

- | | |
|-----------------|---------------------------------|
| 1 Hour hand | 6 24-hour graduated fixed bezel |
| 2 Minute hand | 7 Twinlock winding crown |
| 3 Small seconds | |
| 4 24-hour hand | |
| 5 Date window | |

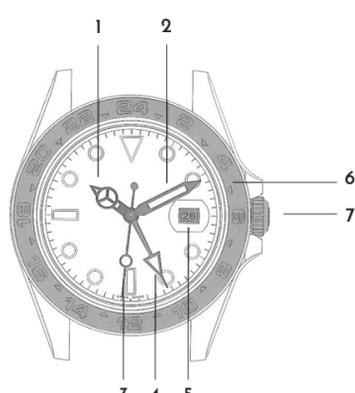

SETTING THE OYSTER PERPETUAL EXPLORER II

Screwed-down position (position 0):

the crown is completely screwed down against the case.

When the crown and pushers are in this position, the Oyster Perpetual Explorer II is guaranteed waterproof to a depth of 50 metres

Manual winding (crown in position 1):

the crown is unscrewed. To wind the watch manually, turn the crown clockwise; turning in the other direction has no effect. When setting the watch for the first time or after the watch has stopped, complete a minimum of 20 turns for partial winding

Complete setting of the watch is carried out by following the two steps in the order given:

1. Setting the reference time (crown in position 3):

To set the reference time, follow the steps in the order given:

- Unscrew the crown and then pull it out to the second notch. The seconds hand is stopped, allowing you to set the time to the precise second.
- Set the reference time using the 24-hour hand (against the graduations on the bezel) and the minute hand (against the graduations on the dial) by turning the crown in either direction.

Setting the reference time also moves the conventional hour hand (local time). For this reason, the reference time must be set before setting the local time

2. Setting the date and the local time (crown in position 2):

To set the date and the local time, follow the steps in the order given:


- Pull the crown out to the first notch.
- Set the date by turning the crown in either direction. The hour hand moves in increments of one hour. The date changes when the hour passes midnight, in either direction, after two full turns around the dial.
- Set the local time by turning the crown in either direction. The hour hand moves of one hour. Be aware of the difference between noon and midnight (the date changes as the hour hand passes midnight).
- Push in and then screw down the crown.

The local time is identical to the reference time (24-hour hand) if the wearer is currently located in his reference zone. It can be easily adjusted when traveling.

Adjusting the local time (crown in position 2):

When travelling, to adjust the local time only (without affecting the 24-hour reference time display), follow the steps in the order given:

- Unscrew the crown and then pull it out to the first notch.
- Set the local time by turning the crown in either direction. The hour hand moves in increments of one hour. The date is linked to the local time and changes automatically when the hour hand passes midnight.
- Push in and then screw down the crown.

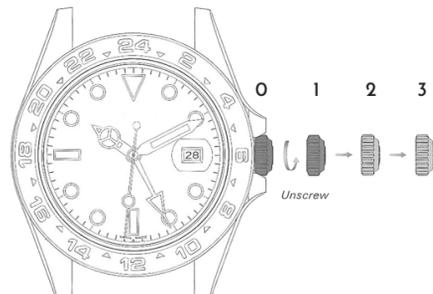

After every use, carefully screw the crown back down against the case to guarantee the waterproofness. The crown should never be unscrewed under water




Reference time, Geneva, 10.10 a.m.



To screw the crown back down against the case, return it to position 1 and apply light pressure on it while screwing it down clockwise against the case.

Reference time, Geneva, 10.10 a.m.

After every use, carefully screw the crown back down against the case to guarantee the waterproofness. The crown should never be unscrewed under water

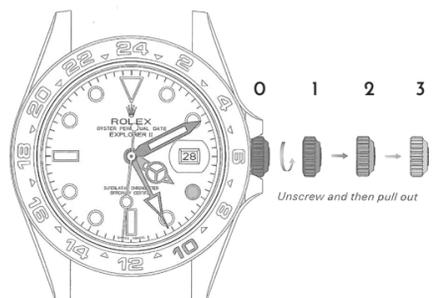


To screw the crown back down against the case, return it to position 1 and apply light pressure on it while screwing it down clockwise against the case.

Reference time, Geneva, 10.10 a.m.

After every use, carefully screw the crown back down against the case to guarantee the waterproofness. The crown should never be unscrewed under water

ADJUSTING FROM THE SHORT POSITION TO THE LONG POSITION

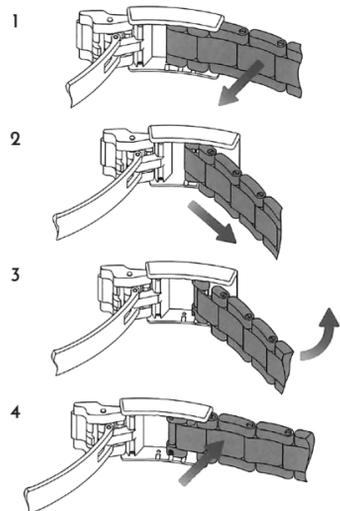

ADJUSTING FROM THE LONG POSITION TO THE SHORT POSITION

